
SMART REMOTE USER MANUAL

BUTTON SPECIFICATIONS

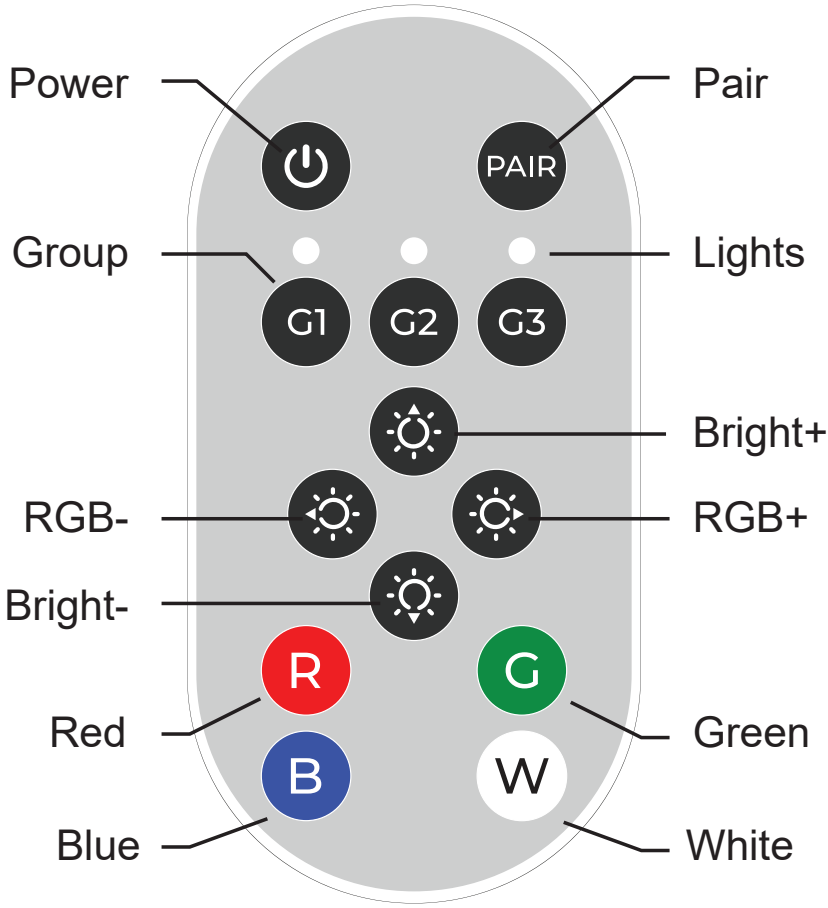

PAIRING REMOTE WITH APP

PAIR

• Press and hold the **"Pair"** button on the remote for 3 to 5 seconds.



Tap the **"+"** icon in the app to add a new remote.

plexilent®
simplifying life

- After scanning nearby devices, the app will display an option to add devices.
- You can now add remote to the app.

CONFIGURING GROUP KEYS ON THE REMOTE

Default Group Assignment:

The first three groups set in the app are automatically assigned to the group keys **G1, G2, and G3** on the remote.

These keys will function for the first three groups from the app until reconfigured.

Accessing the Control Screen:

To configure the group keys, open the control screen for the remote in the app. Long press the icon of the newly added remote in the app to access the control screen.



Entering Configuring Mode:

After opening the control screen, press and hold the Pair button on the remote to enter configuring mode.

Assigning Group Keys:

Once the remote is in configuring mode, you can assign the group keys (G1, G2, G3) to the groups of your preference for easy access.

USAGE



Power Button -
To turn the desired group **ON or OFF,** press the **'POWER'** button.

G1
G2
G3

Group Buttons -
To activate a group of devices, simply **press the corresponding Group button**, and the devices within that Group will turn on.

CHANGE BRIGHTNESS

Dimming-
To adjust the brightness of the devices, press **'Bright +' or 'Bright -'** as per your convenience.

CHANGE COLOR

Changing Color - To change colour temperature press on the **'RGB+ & RGB-'**

SELECTIVE COLOR CONTROL

R Red

G Green

B Blue

W White

To change the color of the desired group of devices, use the preset color buttons: **R (Red), G (Green), B (Blue), and W (White).**

plexilent®
simplifying life

MANUAL UNPAIR



Resetting/Unpairing The Remote

If you need to reset or unpair the remote from the app, follow these steps:

Ensure the Remote is On:
Make sure the remote is powered on before attempting to reset or unpair it.

Press the Reset Buttons:
Simultaneously press and hold both the **'Power and Pair'** buttons on the remote.

Hold for a Few Seconds:
Keep holding both buttons for a few seconds until you see a notification on the remote **(such as a light flash)** indicating that it is resetting.

Remote is Reset:
Once the reset process is complete, the remote will return to its **default factory settings.**

Any previous pairings with the app will be erased, and the remote will need to be paired again before it can be used.

Re-pairing the Remote:
To use the remote again, follow the steps to pair it with the app as outlined in the "Pairing the Remote with the App" section.

UNPAIR VIA APP

Open the Control Screen:
Press and hold the **remote icon** in the app to open the **control screen.**



Enter Configuring Mode:
On the control screen, press and hold the **'Pair'** button on the remote to enter **configuring mode.**

Select Kickout in the App:
Once in configuring mode, tap the **'Kickout'** button in the app to **unpair** the remote.

Confirm Unpairing:
The **LED** on the remote will **blink 8 times** to confirm that the remote has been **successfully unpaired.**